

# Work Order ID 96562

\*96562\*

Page 1

January-31-13 10:28:08 AM

Item ID: D350-567-141 Accept \*N900040100\* Setup Start \*NS1\*  
 Revision ID: Stop \*NS2\*  
 Item Name: Floor Window Closeout Installation  
 Start Date: 1/31/13 Start Qty: 1.00 \*1\* Cust Item ID:  
 Required Date: 2/20/13 Req'd Qty: 1.00 \*1\* Customer:  
 Reference:

Approvals: Process Plan: MUS Date: 13-01-31 Tooling: \_\_\_\_\_ Date: \_\_\_\_\_  
 QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_  
 Run Start \*NR1\*  
 Stop \*NR2\*

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
Draw Nbr	Revision Nbr								
DSI 9590	C								
100		0.00							
*100*	DOCUMENT CONTROL								
DC	Memo	0.00							
Document Control	Photocopy bluefile & type labels per PPP D350-567-141 CHG002								
110	Pick Kit	0.00							
*110*									
Packaging	Memo	0.00							
Packaging									
120	QC4- 100% Inspect kits for completeness	0.00							
*120*									
QC	Memo	0.00							
Quality Control									

1 13-02-11

1X 13-02-11

1

NCR: Yes / No

## WORK ORDER NON-CONFORMANCE / UPDATE

DQA: \_\_\_\_\_ Date: \_\_\_\_\_

QA Closed: \_\_\_\_\_ Date: \_\_\_\_\_

Work Order: _____  Part No. _____  NCR No. _____	<b>DISPOSITION</b>  Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Work Order Update <input type="checkbox"/>	<b>AGAINST DEPARTMENT/PROCESS</b>  <table style="width: 100%;"> <tr> <td>Skid-tube <input type="checkbox"/></td> <td>Crosstube <input type="checkbox"/></td> <td>Water Jet <input type="checkbox"/></td> <td>Engineering <input type="checkbox"/></td> </tr> <tr> <td>Machining <input type="checkbox"/></td> <td>Small Fab <input type="checkbox"/></td> <td>Prod. Eng. Coord. <input type="checkbox"/></td> <td>Quality <input type="checkbox"/></td> </tr> <tr> <td>Thermoforming <input type="checkbox"/></td> <td>Finishing <input type="checkbox"/></td> <td>Rec/Store/Packaging <input type="checkbox"/></td> <td>Other <input type="checkbox"/></td> </tr> <tr> <td>Large Fab <input type="checkbox"/></td> <td>Composite <input type="checkbox"/></td> <td>Supplier <input type="checkbox"/></td> <td></td> </tr> </table>	Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>	Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>	Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>	Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>	
Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>															
Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>															
Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>															
Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>																

Root Cause	Date	Step	Qty	Description of work order update or Non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Doc/Data									
Equip/Tooling									
Operator									
Material									
Setup									
Other									
Process									
Supplier									
Training									
Unapproved									

### FAULT CATEGORY

<b>Landing Gear</b> <input type="checkbox"/> Bending <input type="checkbox"/> Centre Not Concentric to O/S <input type="checkbox"/> Cracks <input type="checkbox"/> Crushed/Crimped. <input type="checkbox"/> Cuffs <input type="checkbox"/> Heat Treat <input type="checkbox"/> Inspection Strip in Tube <input type="checkbox"/> Ripples in Bend <input type="checkbox"/> Torque Waves in Extrusion <input type="checkbox"/> Turning Sequence <input type="checkbox"/> Wave/Twist in Tube	<b>General</b> <input type="checkbox"/> Bend <input type="checkbox"/> BOM/Route <input type="checkbox"/> Broken/Damaged <input type="checkbox"/> Burrs <input type="checkbox"/> Contamination <input type="checkbox"/> Countersink <input type="checkbox"/> Cut Too Short <input type="checkbox"/> Drill Holes <input type="checkbox"/> Drawing <input type="checkbox"/> Finish <input type="checkbox"/> Folio	<input type="checkbox"/> Grain <input type="checkbox"/> Hardware <input type="checkbox"/> Inspection Incomplete <input type="checkbox"/> Instructor's Incomplete/Unclear <input type="checkbox"/> Maintenance <input type="checkbox"/> Mislabeled <input type="checkbox"/> Misread <input type="checkbox"/> Offset <input type="checkbox"/> Out of Calibration <input type="checkbox"/> Out of Sequence <input type="checkbox"/> Outside Dimensions
		<input type="checkbox"/> Ovalized <input type="checkbox"/> Over/Under tolerance <input type="checkbox"/> Part Incorrect <input type="checkbox"/> Part Lost/Missing <input type="checkbox"/> Part Moved <input type="checkbox"/> Positioned Wrong <input type="checkbox"/> Power Loss/Surge
		<input type="checkbox"/> Pressure/Forced <input type="checkbox"/> Temperature/Cure <input type="checkbox"/> Weld <input type="checkbox"/> Wrong Stock Pulled <input type="checkbox"/> Other

**Work Order ID 96562**

January-31-13 10:28:08 AM

**\*96562\***

Page 2

Item ID: D350-567-141

Accept

**\*N900040100\***Setup Start **\*NS1\***

Revision ID:

Stop **\*NS2\***

Item Name: Floor Window Closeout Installation

Start Date: 1/31/13 Start Qty: 1.00 **\*1\***

Cust Item ID:

Required Date: 2/20/13 Req'd Qty: 1.00 **\*1\***

Customer:

Reference:

Approvals: Process Plan: \_\_\_\_\_ Date: \_\_\_\_\_ Tooling: \_\_\_\_\_ Date: \_\_\_\_\_

Run Start **\*NR1\***

QC: \_\_\_\_\_ Date: \_\_\_\_\_ SPC (Y/N): \_\_\_\_\_ Date: \_\_\_\_\_

Stop **\*NR2\***

Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Tool ID	Tool #	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
130		0.00							
<b>*130*</b>	Packaging								
Packaging	Memo	0.00							
Packaging	Identify and pack for shipping as per PPP D350-567-141 Location: <u>FG 059A</u> <u>REV. B</u>								
140		0.00							
<b>*140*</b>	QC21- Final Inspection - Work Order Release								
QC	Memo	0.00							
Quality Control									

8 13/2/19

13/2/20 8

9/13-02-19

NCR: Yes / No

## WORK ORDER NON-CONFORMANCE / UPDATE

DQA: \_\_\_\_\_ Date: \_\_\_\_\_

QA Closed: \_\_\_\_\_ Date: \_\_\_\_\_

Work Order: _____  Part No. _____  NCR No. _____	<b>DISPOSITION</b>  Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Work Order Update <input type="checkbox"/>	<b>AGAINST DEPARTMENT/PROCESS</b>  <table style="width: 100%;"> <tr> <td>Skid-tube <input type="checkbox"/></td> <td>Crosstube <input type="checkbox"/></td> <td>Water Jet <input type="checkbox"/></td> <td>Engineering <input type="checkbox"/></td> </tr> <tr> <td>Machining <input type="checkbox"/></td> <td>Small Fab <input type="checkbox"/></td> <td>Prod. Eng. Coord. <input type="checkbox"/></td> <td>Quality <input type="checkbox"/></td> </tr> <tr> <td>Thermoforming <input type="checkbox"/></td> <td>Finishing <input type="checkbox"/></td> <td>Rec/Store/Packaging <input type="checkbox"/></td> <td>Other <input type="checkbox"/></td> </tr> <tr> <td>Large Fab <input type="checkbox"/></td> <td>Composite <input type="checkbox"/></td> <td>Supplier <input type="checkbox"/></td> <td></td> </tr> </table>	Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>	Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>	Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>	Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>	
Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>															
Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>															
Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>															
Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>																

Root Cause	Date	Step	Qty	Description of work order update or Non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Doc/Data									
Equip/Tooling									
Operator									
Material									
Setup									
Other									
Process									
Supplier									
Training									
Unapproved									

### FAULT CATEGORY

<b>Landing Gear</b> <input type="checkbox"/> Bending <input type="checkbox"/> Centre Not Concentric to O/S <input type="checkbox"/> Cracks <input type="checkbox"/> Crushed/Crimped <input type="checkbox"/> Cuffs <input type="checkbox"/> Heat Treat <input type="checkbox"/> Inspection Strip in Tube <input type="checkbox"/> Ripples in Bend <input type="checkbox"/> Torque Waves in Extrusion <input type="checkbox"/> Turning Sequence <input type="checkbox"/> Wave/Twist in Tube	<b>General</b> <input type="checkbox"/> Bend <input type="checkbox"/> BOM/Route <input type="checkbox"/> Broken/Damaged <input type="checkbox"/> Burrs <input type="checkbox"/> Contamination <input type="checkbox"/> Countersink <input type="checkbox"/> Cut Too Short <input type="checkbox"/> Drill Holes <input type="checkbox"/> Drawing <input type="checkbox"/> Finish <input type="checkbox"/> Folio	<input type="checkbox"/> Grain <input type="checkbox"/> Hardware <input type="checkbox"/> Inspection Incomplete <input type="checkbox"/> Instructions Incomplete/Unclear <input type="checkbox"/> Maintenance <input type="checkbox"/> Mislabeled <input type="checkbox"/> Misread <input type="checkbox"/> Offset <input type="checkbox"/> Out of Calibration <input type="checkbox"/> Out of Sequence <input type="checkbox"/> Outside Dimensions
		<input type="checkbox"/> Ovalized <input type="checkbox"/> Over/Under tolerance <input type="checkbox"/> Part Incorrect <input type="checkbox"/> Part Lost/Missing <input type="checkbox"/> Part Moved <input type="checkbox"/> Positioned Wrong <input type="checkbox"/> Power Loss/Surge
		<input type="checkbox"/> Pressure/Forced <input type="checkbox"/> Temperature/Cure <input type="checkbox"/> Weld <input type="checkbox"/> Wrong Stock Pulled <input type="checkbox"/> Other

# Picklist Print

January-31-13 10:28:07 AM

Page 1

Work Order ID: 96562

Parent Item: D350-567-141

Parent Item Name: Floor Window Closeout Installation

Start Date: 1/31/13

Required Date: 2/20/13

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP REV:A 11.11.09 new issue DD verf:JLM IPP REV:B 12.01.23 AS PER  
ECN12-511 DD VERF:EC IPP REV:C 12.03.05 AS PER ECN12-537 DD VERF:EC

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	-------------	--------------	---------------	----------------	--------

D3802-1 Window Seal		Manufactured	No			110	f	355.6400	2	2			
------------------------	--	--------------	----	--	--	-----	---	----------	---	---	--	--	--

Location	Loc Qty	Loc Code
----------	---------	----------

ST408	355.64	
56881	0.75	
81021	2	
81868	352.89	

D4434-041 Fwd Bracket Assembly		Manufactured	No			110	Each	0.0000	1	1			
-----------------------------------	--	--------------	----	--	--	-----	------	--------	---	---	--	--	--

D4434-047 Cover Assembly		Manufactured	No			110	Each	7.0000	1	1			
-----------------------------	--	--------------	----	--	--	-----	------	--------	---	---	--	--	--

Location	Loc Qty	Loc Code
----------	---------	----------

ST273	7	
93926	1	
94700	6	

D4435-045 T/R Bellcrank Cover Assembly		Manufactured	No			110	Each	1.0000					
---	--	--------------	----	--	--	-----	------	--------	--	--	--	--	--

Location	Loc Qty	Loc Code
----------	---------	----------

ST273	1	
93214	1	

D4435-9 Bracket		Manufactured	No			110	Each	0.0000	2	2			
--------------------	--	--------------	----	--	--	-----	------	--------	---	---	--	--	--

D4436-041 Aft Bracket Assembly		Manufactured	No			110	Each	0.0000	1	1			
-----------------------------------	--	--------------	----	--	--	-----	------	--------	---	---	--	--	--

SP 13-2-11.

NCR: Yes / No

**WORK ORDER NON-CONFORMANCE / UPDATE**

DQA: \_\_\_\_\_ Date: \_\_\_\_\_

QA Closed: \_\_\_\_\_ Date: \_\_\_\_\_

Work Order: _____  Part No. _____  NCR No. _____				<b>DISPOSITION</b>  Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Work Order Update <input type="checkbox"/>		<b>AGAINST DEPARTMENT/PROCESS</b>  <div style="display: flex; justify-content: space-between;"> <div>           Skid-tube <input type="checkbox"/>            Machining <input type="checkbox"/>            Thermoforming <input type="checkbox"/>            Large Fab <input type="checkbox"/> </div> <div>           Crosstube <input type="checkbox"/>            Small Fab <input type="checkbox"/>            Finishing <input type="checkbox"/>            Composite <input type="checkbox"/> </div> <div>           Water Jet <input type="checkbox"/>            Prod. Eng. Coord. <input type="checkbox"/>            Rec/Store/Packaging <input type="checkbox"/>            Supplier <input type="checkbox"/> </div> <div>           Engineering <input type="checkbox"/>            Quality <input type="checkbox"/>            Other <input type="checkbox"/> </div> </div>					
Root Cause	Date	Step	Qty	Description of work order update or Non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector		
Doc/Data											
Equip/Tooling											
Operator											
Material											
Setup											
Other											
Process											
Supplier											
Training											
Unapproved											

FAULT CATEGORY											
<b>Landing Gear</b> <input type="checkbox"/> Bending <input type="checkbox"/> Centre Not Concentric to O/S <input type="checkbox"/> Cracks <input type="checkbox"/> Crushed/Crimped. <input type="checkbox"/> Cuffs <input type="checkbox"/> Heat Treat <input type="checkbox"/> Inspection Strip in Tube <input type="checkbox"/> Ripples in Bend <input type="checkbox"/> Torque Waves in Extrusion <input type="checkbox"/> Turning Sequence <input type="checkbox"/> Wave/Twist in Tube			<b>General</b> <input type="checkbox"/> Bend <input type="checkbox"/> BOM/Route <input type="checkbox"/> Broken/Damaged <input type="checkbox"/> Burrs <input type="checkbox"/> Contamination <input type="checkbox"/> Countersink <input type="checkbox"/> Cut Too Short <input type="checkbox"/> Drill Holes <input type="checkbox"/> Drawing <input type="checkbox"/> Finish <input type="checkbox"/> Folio			<input type="checkbox"/> Grain <input type="checkbox"/> Hardware <input type="checkbox"/> Inspection Incomplete <input type="checkbox"/> Instructions Incomplete/Unclear <input type="checkbox"/> Maintenance <input type="checkbox"/> Mislabeled <input type="checkbox"/> Misread <input type="checkbox"/> Offset <input type="checkbox"/> Out of Calibration <input type="checkbox"/> Out of Sequence <input type="checkbox"/> Outside Dimensions			<input type="checkbox"/> Ovalized <input type="checkbox"/> Over/Under tolerance <input type="checkbox"/> Part Incorrect <input type="checkbox"/> Part Lost/Missing <input type="checkbox"/> Part Moved <input type="checkbox"/> Positioned Wrong <input type="checkbox"/> Power Loss/Surge		<input type="checkbox"/> Pressure/Forced <input type="checkbox"/> Temperature/Cure <input type="checkbox"/> Weld <input type="checkbox"/> Wrong Stock Pulled  <input type="checkbox"/> Other

# Picklist Print

January-31-13 10:28:08 AM

Page 2

Work Order ID: 96562

Parent Item: D350-567-141

Parent Item Name: Floor Window Closeout Installation

Start Date: 1/31/13

Required Date: 2/20/13

Start Qty: 1.00

Required Qty: 1.00

<b>D4441-1</b> Rubber Seal	Manufactured	No	110	f	518.6966	<b>2</b>	2	SP	
1x 24" SP									
SP									
	<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>				
	ST412		518.6966						
	74760		6.119						
	79385		0.0476						
	80763		47.122				2x		
	86185		465.408						
<b>AN3-34</b> Bolt	Purchased	No	110	Each	402.0000	<b>7</b>	7	SP	
SP									
	<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>				
	ST350		402						
	123352		6						
	123831		196				7x		
	124221		200						
<b>AN525-832R7</b> Screw	Purchased	No	110	Each	328.0000	<b>2</b>	2	SP	
SP									
	<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>				
	GA		34						
	120519		34						
	ST343		294						
	120560		294				2x		
<b>MS21042L06</b> Nut	Purchased	No	110	Each	66.0000	<b>7</b>	7	SP 13-2-11	
SP									
	<u>Location</u>		<u>Loc Qty</u>		<u>Loc Code</u>				
	ST314		66						
	122441		3						
	123900		63				7x		

NCR: Yes / No

**WORK ORDER NON-CONFORMANCE / UPDATE**

DQA: \_\_\_\_\_ Date: \_\_\_\_\_

QA Closed: \_\_\_\_\_ Date: \_\_\_\_\_

Work Order: _____  Part No. _____  NCR No. _____	<b>DISPOSITION</b>  Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Work Order Update <input type="checkbox"/>	<b>AGAINST DEPARTMENT/PROCESS</b>  <table style="width: 100%;"> <tr> <td>Skid-tube <input type="checkbox"/></td> <td>Crosstube <input type="checkbox"/></td> <td>Water Jet <input type="checkbox"/></td> <td>Engineering <input type="checkbox"/></td> </tr> <tr> <td>Machining <input type="checkbox"/></td> <td>Small Fab <input type="checkbox"/></td> <td>Prod. Eng. Coord. <input type="checkbox"/></td> <td>Quality <input type="checkbox"/></td> </tr> <tr> <td>Thermoforming <input type="checkbox"/></td> <td>Finishing <input type="checkbox"/></td> <td>Rec/Store/Packaging <input type="checkbox"/></td> <td>Other <input type="checkbox"/></td> </tr> <tr> <td>Large Fab <input type="checkbox"/></td> <td>Composite <input type="checkbox"/></td> <td>Supplier <input type="checkbox"/></td> <td></td> </tr> </table>	Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>	Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>	Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>	Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>	
Skid-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>															
Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>															
Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>															
Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>																

Root Cause	Date	Step	Qty	Description of work order update or Non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Doc/Data									
Equip/Tooling									
Operator									
Material									
Setup									
Other									
Process									
Supplier									
Training									
Unapproved									

**FAULT CATEGORY**

Landing Gear	General	Other
<input type="checkbox"/> Bending	<input type="checkbox"/> Bend	<input type="checkbox"/> Grain
<input type="checkbox"/> Centre Not Concentric to O/S	<input type="checkbox"/> BOM/Route	<input type="checkbox"/> Hardware
<input type="checkbox"/> Cracks	<input type="checkbox"/> Broken/Damaged	<input type="checkbox"/> Inspection Incomplete
<input type="checkbox"/> Crushed/Crimped	<input type="checkbox"/> Burrs	<input type="checkbox"/> Instructions Incomplete/Unclear
<input type="checkbox"/> Cuffs	<input type="checkbox"/> Contamination	<input type="checkbox"/> Maintenance
<input type="checkbox"/> Heat Treat	<input type="checkbox"/> Countersink	<input type="checkbox"/> Mislabeled
<input type="checkbox"/> Inspection Strip in Tube	<input type="checkbox"/> Cut Too Short	<input type="checkbox"/> Misread
<input type="checkbox"/> Ripples in Bend	<input type="checkbox"/> Drill Holes	<input type="checkbox"/> Offset
<input type="checkbox"/> Torque Waves in Extrusion	<input type="checkbox"/> Drawing	<input type="checkbox"/> Out of Calibration
<input type="checkbox"/> Turning Sequence	<input type="checkbox"/> Finish	<input type="checkbox"/> Out of Sequence
<input type="checkbox"/> Wave/Twist in Tube	<input type="checkbox"/> Folio	<input type="checkbox"/> Outside Dimensions
		<input type="checkbox"/> Ovalized
		<input type="checkbox"/> Over/Under tolerance
		<input type="checkbox"/> Part Incorrect
		<input type="checkbox"/> Part Lost/Missing
		<input type="checkbox"/> Part Moved
		<input type="checkbox"/> Positioned Wrong
		<input type="checkbox"/> Power Loss/Surge
		<input type="checkbox"/> Pressure/Forced
		<input type="checkbox"/> Temperature/Cure
		<input type="checkbox"/> Weld
		<input type="checkbox"/> Wrong Stock Pulled
		<input type="checkbox"/> Other



# Picklist Print

January-31-13 10:28:08 AM

Page 3

Work Order ID: 96562

Parent Item: D350-567-141

Parent Item Name: Floor Window Closeout Installation

Start Date: 1/31/13

Required Date: 2/20/13

Start Qty: 1.00

Required Qty: 1.00

**MS21042L08**

Nut

Purchased No

110 Each 4,134.0000

2

Location

Loc Qty

Loc Code

ST315

4134

122141

3

122452

9

122814

500

123900

3622

**MS21042L13**

Nut

Purchased No

110 Each 7,540.0000

5

Location

Loc Qty

Loc Code

FP001

3

122141

3

GA

426

122452

426

ST314

268

117885

32

119017

55

119075

138

123265

43

ST506

6843

123900

2843

124291

4000

**MS21059L13**

Nut Plate

Purchased No

110 Each 382.0000

2

Location

Loc Qty

Loc Code

ST316

182

123900

8

124291

174

ST506

200

124308

200

January-31-13 10:28:08 AM

Shop Packet Print

Page 3

NCR: Yes / No

## WORK ORDER NON-CONFORMANCE / UPDATE

DQA: \_\_\_\_\_ Date: \_\_\_\_\_

QA Closed: \_\_\_\_\_ Date: \_\_\_\_\_

Work Order: _____  Part No. _____  NCR No. _____	<b>DISPOSITION</b>  <div style="display: flex; justify-content: space-around;"> <span>Rework <input type="checkbox"/></span> <span>Skid-tube <input type="checkbox"/></span> </div> <div style="display: flex; justify-content: space-around;"> <span>Scrap <input type="checkbox"/></span> <span>Machining <input type="checkbox"/></span> </div> <div style="display: flex; justify-content: space-around;"> <span>Use-as-is <input type="checkbox"/></span> <span>Thermoforming <input type="checkbox"/></span> </div> <div style="display: flex; justify-content: space-around;"> <span>Work Order Update <input type="checkbox"/></span> <span>Large Fab <input type="checkbox"/></span> </div>	<b>AGAINST DEPARTMENT/PROCESS</b>  <div style="display: flex; justify-content: space-between;"> <div style="width: 30%;">           Crosstube <input type="checkbox"/>            Small Fab <input type="checkbox"/>            Finishing <input type="checkbox"/>            Composite <input type="checkbox"/> </div> <div style="width: 30%;">           Water Jet <input type="checkbox"/>            Prod. Eng. Coord. <input type="checkbox"/>            Rec/Store/Packaging <input type="checkbox"/>            Supplier <input type="checkbox"/> </div> <div style="width: 30%;">           Engineering <input type="checkbox"/>            Quality <input type="checkbox"/>            Other <input type="checkbox"/> </div> </div>
--	--	---

Root Cause	Date	Step	Qty	Description of work order update or Non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Doc/Data									
Equip/Tooling									
Operator									
Material									
Setup									
Other									
Process									
Supplier									
Training									
Unapproved									

### FAULT CATEGORY

<b>Landing Gear</b> <input type="checkbox"/> Bending <input type="checkbox"/> Centre Not Concentric to O/S <input type="checkbox"/> Cracks <input type="checkbox"/> Crushed/Crimped. <input type="checkbox"/> Cuffs <input type="checkbox"/> Heat Treat <input type="checkbox"/> Inspection Strip in Tube <input type="checkbox"/> Ripples in Bend <input type="checkbox"/> Torque Waves in Extrusion <input type="checkbox"/> Turning Sequence <input type="checkbox"/> Wave/Twist in Tube	<b>General</b> <input type="checkbox"/> Bend <input type="checkbox"/> BOM/Route <input type="checkbox"/> Broken/Damaged <input type="checkbox"/> Burrs <input type="checkbox"/> Contamination <input type="checkbox"/> Countersink <input type="checkbox"/> Cut Too Short <input type="checkbox"/> Drill Holes <input type="checkbox"/> Drawing <input type="checkbox"/> Finish <input type="checkbox"/> Folio	<input type="checkbox"/> Grain <input type="checkbox"/> Hardware <input type="checkbox"/> Inspection ncomplete <input type="checkbox"/> Instructions Incomplete/Unclear <input type="checkbox"/> Maintenance <input type="checkbox"/> Mislabeled <input type="checkbox"/> Misread <input type="checkbox"/> Offset <input type="checkbox"/> Out of Calibration <input type="checkbox"/> Out of Sequence <input type="checkbox"/> Outside Dimensions
<div style="display: flex; justify-content: space-between;"> <div style="width: 30%;"> <input type="checkbox"/> Ovalized  <input type="checkbox"/> Over/Under tolerance  <input type="checkbox"/> Part Incorrect  <input type="checkbox"/> Part Lost/Missing  <input type="checkbox"/> Part Moved  <input type="checkbox"/> Positioned Wrong  <input type="checkbox"/> Power Loss/Surge           </div> <div style="width: 30%;"> <input type="checkbox"/> Pressure/Forced  <input type="checkbox"/> Temperature/Cure  <input type="checkbox"/> Weld  <input type="checkbox"/> Wrong Stock Pulled  <input type="checkbox"/> Other           </div> </div>		

# Picklist Print

January-31-13 10:28:08 AM

Page 4

Work Order ID: 96562

Parent Item: D350-567-141

Start Date: 1/31/13

Required Date: 2/20/13

Parent Item Name: Floor Window Closeout Installation

Start Qty: 1.00

Required Qty: 1.00

MS35206-229

Purchased No

110 Each 152.0000

Screw

## Location

## Loc Qty

## Loc Code

ST288

152

121039

52

123832

100

NAS1149F0332P

Purchased No

110 Each 10,612.000

WASHER

## Location

## Loc Qty

## Loc Code

GA

202

122063

202

ST294

400

122063

400

ST295

10

123352

10

st510

10000

123900

10000

NAS1149FN616P

Purchased No

110 Each 315.0000

WASHER

## Location

## Loc Qty

## Loc Code

ST294

315

120560

315

NAS1149FN816P

Purchased No

Each 687.0000

WASHER

## Location

## Loc Qty

## Loc Code

ST294

687

117316

215

121039

472

January-31-13 10:28:08 AM

Shop Packet Print

Page 4

NCR: Yes / No

## WORK ORDER NON-CONFORMANCE / UPDATE

DQA: \_\_\_\_\_ Date: \_\_\_\_\_

QA Closed: \_\_\_\_\_ Date: \_\_\_\_\_

Work Order: _____  Part No. _____  NCR No. _____	<b>DISPOSITION</b>  Rework <input type="checkbox"/> Scrap <input type="checkbox"/> Use-as-is <input type="checkbox"/> Work Order Update <input type="checkbox"/>	<b>AGAINST DEPARTMENT/PROCESS</b>  <table style="width: 100%;"> <tr> <td>Skic-tube <input type="checkbox"/></td> <td>Crosstube <input type="checkbox"/></td> <td>Water Jet <input type="checkbox"/></td> <td>Engineering <input type="checkbox"/></td> </tr> <tr> <td>Machining <input type="checkbox"/></td> <td>Small Fab <input type="checkbox"/></td> <td>Prod. Eng. Coord. <input type="checkbox"/></td> <td>Quality <input type="checkbox"/></td> </tr> <tr> <td>Thermoforming <input type="checkbox"/></td> <td>Finishing <input type="checkbox"/></td> <td>Rec/Store/Packaging <input type="checkbox"/></td> <td>Other <input type="checkbox"/></td> </tr> <tr> <td>Large Fab <input type="checkbox"/></td> <td>Composite <input type="checkbox"/></td> <td>Supplier <input type="checkbox"/></td> <td></td> </tr> </table>	Skic-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>	Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>	Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>	Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>	
Skic-tube <input type="checkbox"/>	Crosstube <input type="checkbox"/>	Water Jet <input type="checkbox"/>	Engineering <input type="checkbox"/>															
Machining <input type="checkbox"/>	Small Fab <input type="checkbox"/>	Prod. Eng. Coord. <input type="checkbox"/>	Quality <input type="checkbox"/>															
Thermoforming <input type="checkbox"/>	Finishing <input type="checkbox"/>	Rec/Store/Packaging <input type="checkbox"/>	Other <input type="checkbox"/>															
Large Fab <input type="checkbox"/>	Composite <input type="checkbox"/>	Supplier <input type="checkbox"/>																

Root Cause	Date	Step	Qty	Description of work order update or Non-conformance	Initial Chief Eng	Action Description	Sign & Date	Verification	QC Inspector
Doc/Data <input type="checkbox"/>									
Equip/Tooling <input type="checkbox"/>									
Operator <input type="checkbox"/>									
Material <input type="checkbox"/>									
Setup <input type="checkbox"/>									
Other <input type="checkbox"/>									
Process <input type="checkbox"/>									
Supplier <input type="checkbox"/>									
Training <input type="checkbox"/>									
Unapproved <input type="checkbox"/>									

### FAULT CATEGORY

<b>Landing Gear</b> <input type="checkbox"/> Bending <input type="checkbox"/> Centre Not Concentric to O/S <input type="checkbox"/> Cracks <input type="checkbox"/> Crushed/Crimped <input type="checkbox"/> Cuffs <input type="checkbox"/> Heat Treat <input type="checkbox"/> Inspection Strip in Tube <input type="checkbox"/> Ripples in Bend <input type="checkbox"/> Torque Waves in Extrusion <input type="checkbox"/> Turning Sequence <input type="checkbox"/> Wave/Twist in Tube	<b>General</b> <input type="checkbox"/> Bend <input type="checkbox"/> BOM/Route <input type="checkbox"/> Broken/Damaged <input type="checkbox"/> Burrs <input type="checkbox"/> Contamination <input type="checkbox"/> Countersink <input type="checkbox"/> Cut Too Short <input type="checkbox"/> Drill Holes <input type="checkbox"/> Drawing <input type="checkbox"/> Finish <input type="checkbox"/> Folio	<input type="checkbox"/> Grain <input type="checkbox"/> Hardware <input type="checkbox"/> Inspection Incomplete <input type="checkbox"/> Instructions Incomplete/Unclear <input type="checkbox"/> Maintenance <input type="checkbox"/> Mislabeled <input type="checkbox"/> Misread <input type="checkbox"/> Offset <input type="checkbox"/> Out of Calibration <input type="checkbox"/> Out of Sequence <input type="checkbox"/> Outside Dimensions  <input type="checkbox"/> Ovalized <input type="checkbox"/> Over/Under tolerance <input type="checkbox"/> Part Incorrect <input type="checkbox"/> Part Lost/Missing <input type="checkbox"/> Part Moved <input type="checkbox"/> Positioned Wrong <input type="checkbox"/> Power Loss/Surge  <input type="checkbox"/> Pressure/Forced <input type="checkbox"/> Temperature/Cure <input type="checkbox"/> Weld <input type="checkbox"/> Wrong Stock Pulled  <input type="checkbox"/> Other
---	---	--

# DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D350-567 REV. D OR EARLIER  
AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D350-567 REV. 1 OR EARLIER


REF CANADIAN STC: SH92-18

FAA STC: SH989NE

FAA STC: SH990NE

## 1.0 Purpose

The purpose of this service instruction is to add the D350-567-141 Close-out Kit, which is intended for customers wishing to operate their aircraft with the interior floor window removed. The D350-567-141 Floor Window Close-out Kit provides a barrier around the interior and exterior vertical reference floor window to prevent objects from falling into the aircraft controls when the interior floor window is removed as shown in Figure 1.

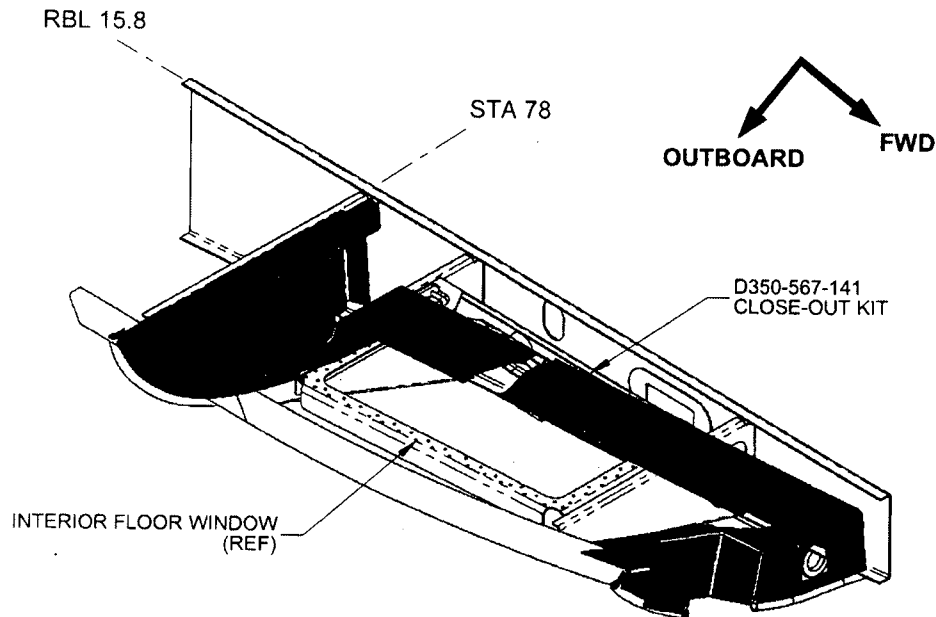

**Figure 1. Floor Window Close-out Kit Installation**

CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01

APPROVED

BY: *[Signature]*  
D. SHEPHERD (DE # 02)

DATE: 12.03.13  
CERT. NO.: SH92-18  
ISSUE NO.: 6

C	CORRECT TYPO NAS1149FN816P WAS NAS1149FN882P	RF	12.03.13
B	MS35206-229 WAS AN525-632R6; NAS1149FN616P (Qty 14) WAS (Qty 9); MS21042L06 (Qty 7) WAS (Qty 9); ADD AN525-832R7, NAS1149FN882P & MS21042L08	RF	12.02.22
A	NEW ISSUE	RF	12.01.09
REV.	DESCRIPTION	BY	DATE
DESIGN	RF	<b>DART AEROSPACE LTD</b> HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 1 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

## 2.0 Part List

Qty -141	Part Number	Description
X	D350-567-141	FLOOR WINDOW CLOSE-OUT KIT
1	D3802-1-024	SEAL (24")
1	D4434-041	FWD BRACKET ASSEMBLY
1	D4434-047	COVER ASSEMBLY
1	D4435-045	T/R BELLCRANK COVER ASSEMBLY
2	D4435-9	BRACKET
1	D4436-041	AFT BRACKET ASSEMBLY
1	D4441-1-240	RUBBER SEAL (24")
7	AN3-3A	BOLT
2	AN525-832R7	SCREW
7	MS21042L06	NUT (OR MS21042-06)
2	MS21042L08	NUT (OR MS21042-08)
5	MS21042L3	NUT (OR MS21042-3)
2	MS21059L3	NUTPLATE
7	MS35206-229	SCREW
12	NAS1149F0332P	WASHER (AN960-10L)
14	NAS1149FN616P	WASHER (OR AN960-6L)
2	NAS1149FN816P	WASHER (OR AN960-8L)

C

## 3.0 Weight and Balance

The following is the net weight increase associated with the D350-567-141 Kit.

Installation	Weight	LATERAL		LONGITUDINAL	
		Arm	Moment	Arm	Moment
<b>D350-567-141</b>	3.9 lb	17.9 in	69.8 in-lb	65.5 in	255.5 in-lb
Floor Window Close-out Kit	1.77 kg	0.45 m	0.80 m-kg	1.66 m	2.94 m-kg

## 4.0 Installation Procedure

Notes:

- Figure 2 shows the general arrangement and installation of the D350-567-141 Close-out Kit. The procedure that follows outlines the step-by-step procedures for installing the kit with reference photos from the initial installation.
- In conjunction with this modification, it is acceptable to remove the interior floor windows as applicable. Note that the structural reinforcement around the window opening is still required.
  - D350-567-115 — OK to remove D3295-041
  - D350-567-031 — OK to remove D3212-1
  - D350-567-011 — OK to remove D2214
  - D350-567-021 — OK to remove D2951
- It is acceptable to drill/trim the D350-567-141 Close-out Kit as required to improve fit.

CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01


APPROVED

BY: MSH  
D. SHEPHERD (DE # 02)

DATE: 12.03.13  
CERT. NO.: SH92-18  
ISSUE NO.: 6

DESIGN	RF	<b>DART AEROSPACE LTD</b> HAWKESBURY, ONTARIO, CANADA
DRAWN	RF	
CHECKED	<u>AS</u>	DRAWING NO. REV. C
MFG. APPR.	N/A	DSI 9590 SHEET 2 OF 12
APPROVED	<u>AS</u>	TITLE SCALE
DE APPR.	<u>AS</u>	FLOOR WINDOW CLOSE-OUT KIT NTS
DATE 12.03.13		COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.

96562

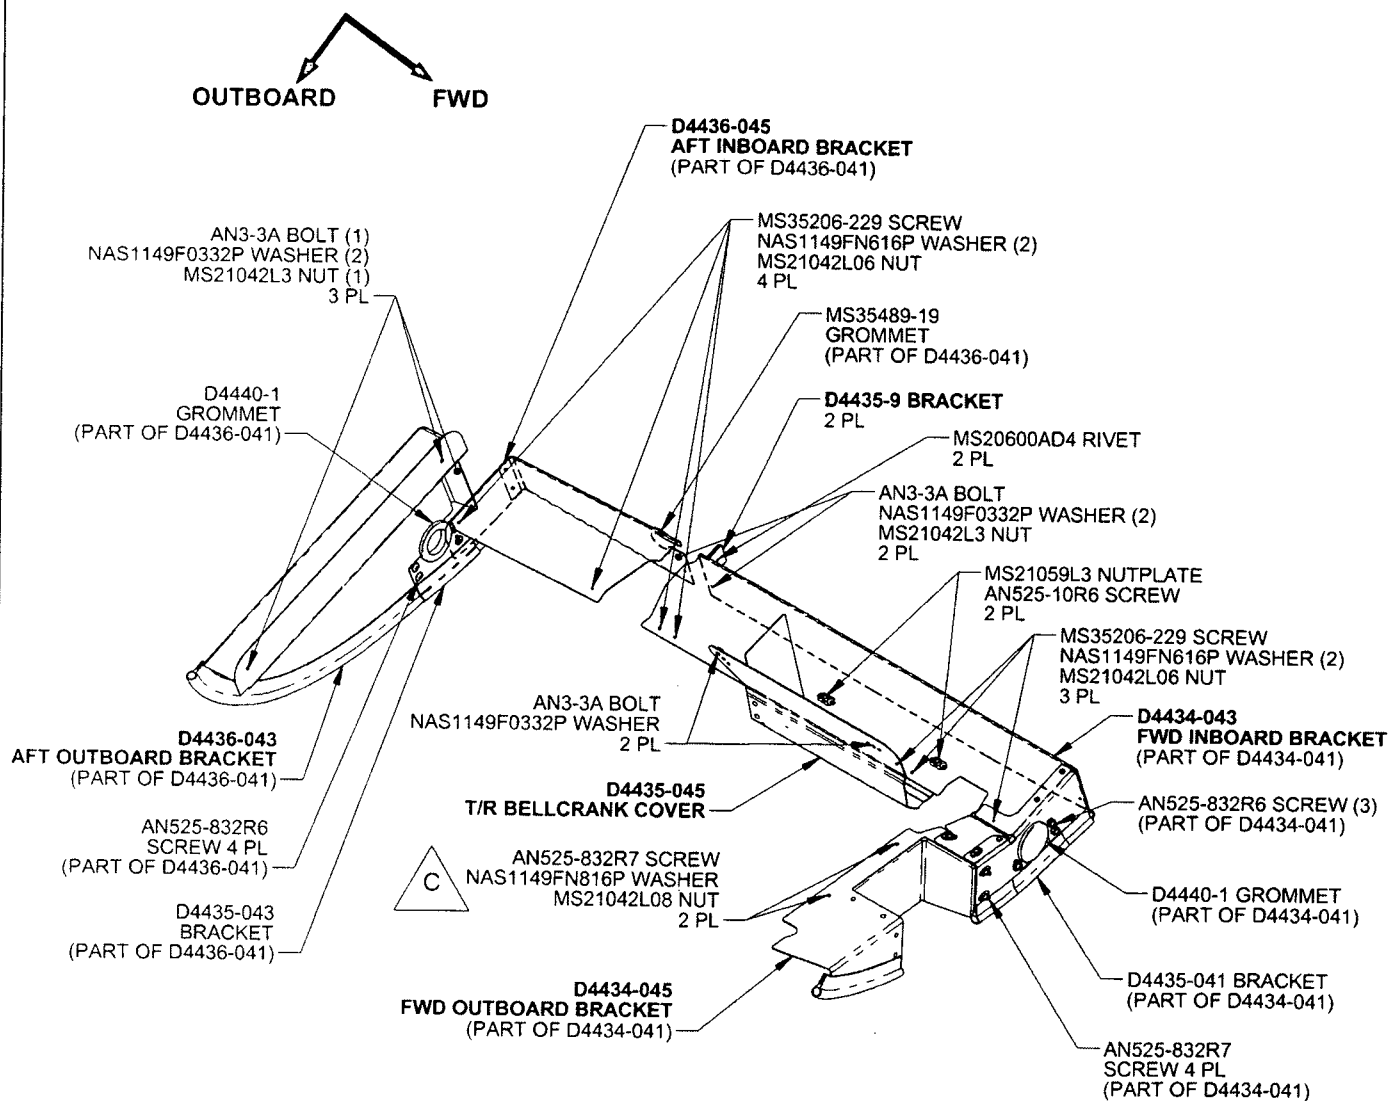

**Figure 2. Floor Window Close-out Kit Installation**

CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01

APPROVED

BY:

D. SHEPHERD (DE # 02)

DATE: 12.03.13  
CERT. NO.: SH92-18  
ISSUE NO.: 6

DESIGN	RF	<b>DART AEROSPACE LTD</b> HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO. <b>DSI 9590</b>	REV. C
MFG. APPR.	N/A	SHEET 3 OF 12	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	<b>FLOOR WINDOW CLOSE-OUT KIT</b>	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

96562

- 4.1 Temporarily install D4436-043 Aft Outboard Bracket and D4436-045 Aft Inboard Bracket using clecos and/or clecos clamps. Before drilling holes:
- Position the D4436-043 Aft Outboard Bracket so the flange contacts the main beam as shown in Figure 3.
  - Confirm that the D4436-043 Aft Outboard Bracket and beam angle are parallel as shown in Figure 4.
- 4.2 Temporarily install D4434-043 Fwd Inboard Bracket and D4434-045 Fwd Outboard Bracket using clecos and cleco clamps. Confirm there is no contact between D4436-045 Aft Inboard Bracket and D4434-043 Fwd Inboard Bracket and main beam gusset as shown in Figure 5.
- 4.3 If aircraft is equipped with Collective Circuit Breaker Board box trim D4434-043 Fwd Inboard Bracket as shown in Figure 14. Install D4434-047 Cover as shown in Figure 13. Note: Confirm the D4434-047 Cover fits over the Collective Circuit Breaker Board box. Adjust opening as required.
- 4.4 Drill off rivets holding plastic wire bundle stand offs. Transfer drill  $\varnothing 0.144$  holes to D4436-045 Aft Inboard Bracket per Figure 6. Transfer drill 2 x  $\varnothing 0.144$  holes to D4434-043 Fwd Inboard Bracket per Figure 7. Transfer drill 2 x  $\varnothing 0.144$  holes for D4434-043 Fwd Inboard Bracket per Figure 8. Before drilling confirm the D4434-043 and D4436-045 brackets are flush with outboard edge of main beam flange. Assemble D4436-045 Aft Inboard Bracket and D4434-043 Fwd Inboard Bracket and wire bundle stand offs to main beam flange using MS35206-229 screw, NAS1149FN616P washer and MS21042L06 nut.
- 4.5 Install D4436-043 Aft Outboard Bracket using AN3-3A bolt and NAS1149F0332P washer and MS21042L3 nut per Figure 9.
- 4.6 Remove 2 rivets holding RH heating plastic stand off as shown in Figure 10. Position the D4435-9 Brackets on the in/outboard sides of the cross beam and transfer drill 2 x  $\varnothing 0.129$  holes from crossbeam to both D4435-9 Brackets. Install D4435-9 Brackets and RH heating plastic stand off using MS20600AD4 rivets or equivalent.
- 4.7 Drill a pilot hole from D4435-9 Bracket to the D4434-045 Fwd Inboard Bracket and D4436-045 Aft Inboard Bracket and open to  $\varnothing 0.191$ . Install AN3-3A bolt, NAS1149F0332P washer and MS21042L3 nut as shown in Figure 10. Be sure to maintain edge distance.
- 4.8 Transfer drill 2 x  $\varnothing 0.144$  holes from crossbeam to D4434-045 Fwd Outboard Bracket if holes exist in crossbeam. If holes do not exist, drill 2 x  $\varnothing 0.144$  holes at either end of D4434-045 bracket as shown in Figure 11. Install AN525-832R7 Screws, NAS1149FN816P washer and MS21042L08 nuts.
- 4.9 Align D4435-045 T/R Bellcrank Cover with existing holes in RH seat track lower frame and temporarily install using clecos and/or cleco clamps as shown in Figure 12.
- 4.10 Transfer drill 2 x  $\varnothing 0.098$  holes from D4435-045 T/R Bellcrank Cover to D4434-043 Fwd Inboard Bracket. Open holes to  $\varnothing 0.191$  and install MS21059L3 nut plate into D4434-043 Fwd Inboard Bracket as shown in Figure 12 and Figure 13. Install D4435-045 T/R Bellcrank Cover using AN525-10R6 screw, AN3-3A bolt and NAS1149F0332P washer per Figure 12 and Figure 13.
- 4.11 The D4440-1 grommets are provided to facilitate the routing of wiring harness thru the close-out kit as required. The wiring harness should be secure to the aircraft structure per AC 43.13.13-1B or AS350 Chapter 20.02.01.
- 4.12 Use the D3802-1-024 Seal to fill gaps between the brackets and the cowlings that are larger than 0.25 inch.
- 4.13 Perform travel/interference check of the flight controls to ensure there is no interference and all controls still have full travel.
- 4.14 Ensure there is a gap between the components of the D350-567-141 Close-out Kit and the aircraft structure so that the Close-out Kit does not chafe, interfere, or cause damage to the surrounding aircraft structure. In areas where the D350-567-041 Close-out Kit may contact the aircraft structure, protect from abrasion using chafing tape or a layer Proseal 890 or MIL-S-8802 class B2 sealant or equivalent as required.



CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01

APPROVED

BY:


D. SHEPHERD (DE # 02)

DATE: 12.03.13  
CERT. NO.: SH92-18  
ISSUE NO.: 6


DESIGN	RF	<b>DART AEROSPACE LTD</b>	
DRAWN	RF	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 4 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE 12.03.13		COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

96562



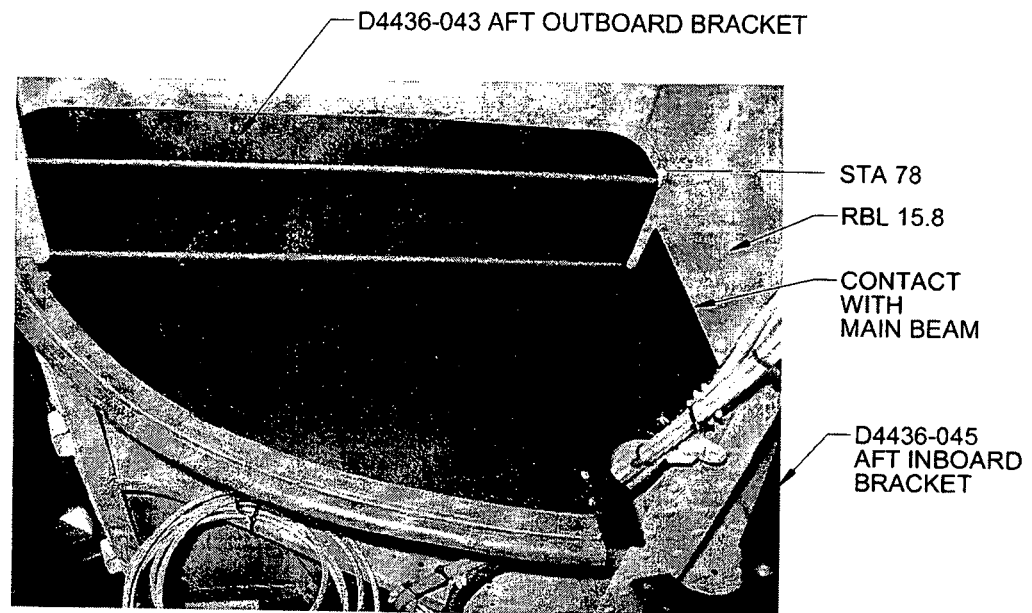

**Figure 3. D4436-043 Aft Outboard Bracket Installation**

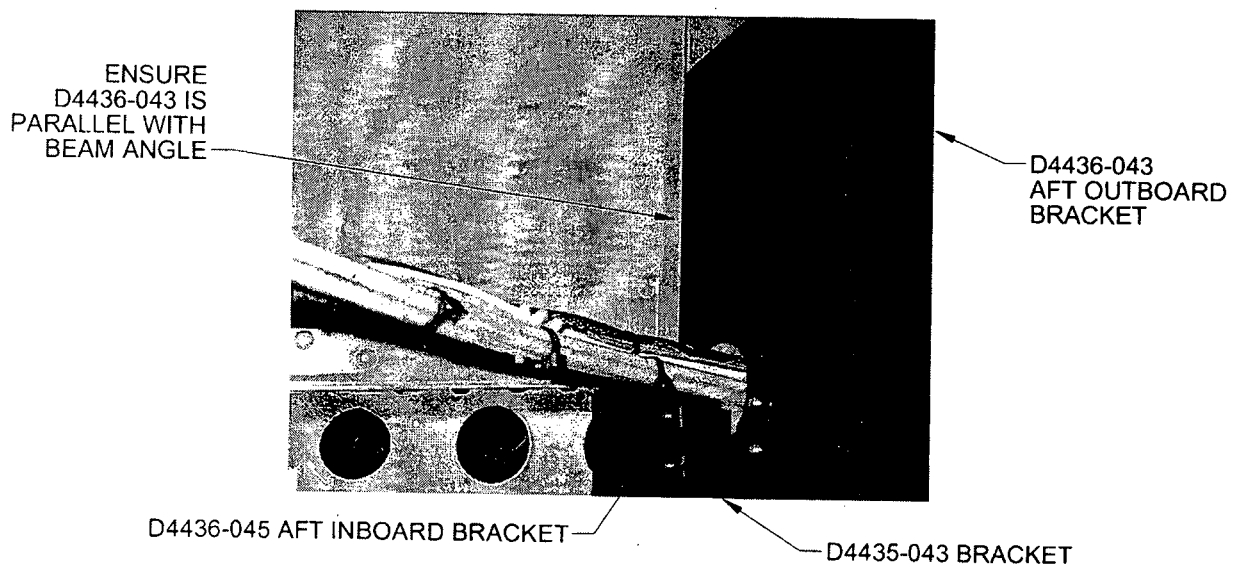

**Figure 4. D4436-043 & D4435-043 Brackets Installation**

CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01

APPROVED

BY: *[Signature]*  
D. SHEPHERD (DE # 02)

DATE: 12.03.13  
CERT. NO.: SH92-18  
ISSUE NO.: 6

DESIGN	RF	<b>DART AEROSPACE LTD</b> HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 5 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	


96562

D4436-045 AFT INBOARD  
BRACKET

NO CONTACT  
WITH GUSSET

D4434-043 FWD INBOARD  
BRACKET


RBL 15.8 - - - -

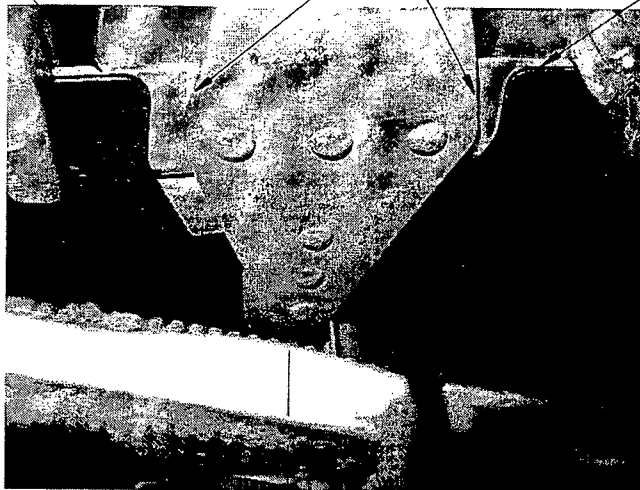

STA 70.5

**Figure 5. D4436-045 & D4434-043 Brackets Installation**

D4436-043  
AFT OUTBOARD  
BRACKET

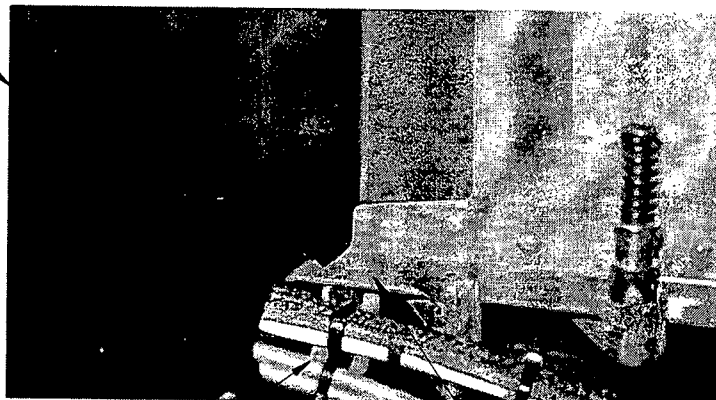

CONFIRM  
FLUSH WITH  
OUTBOARD  
EDGE OF MAIN  
BEAM FLANGE

PLASTIC STAND OFF  
REF

RIVET HOLE  
FOR PLASTIC  
STAND OFF

D4436-045  
AFT INBOARD  
BRACKET




**Figure 6. D4436-043 & D4436-045 Brackets Installation**

CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01

APPROVED

BY: *[Signature]*  
D. SHEPHERD (DE # 02)


DATE: 12.03.13  
CERT. NO.: SH92-18  
ISSUE NO.: 6

DESIGN	RF	<b>DART AEROSPACE LTD</b> HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED		DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 6 OF 12
APPROVED		TITLE	SCALE
DE APPR.		FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

96562

CONFIRM  
FLUSH WITH  
OUTBOARD  
EDGE OF MAIN  
BEAM FLANGE

D4436-045  
AFT INBOARD  
BRACKET

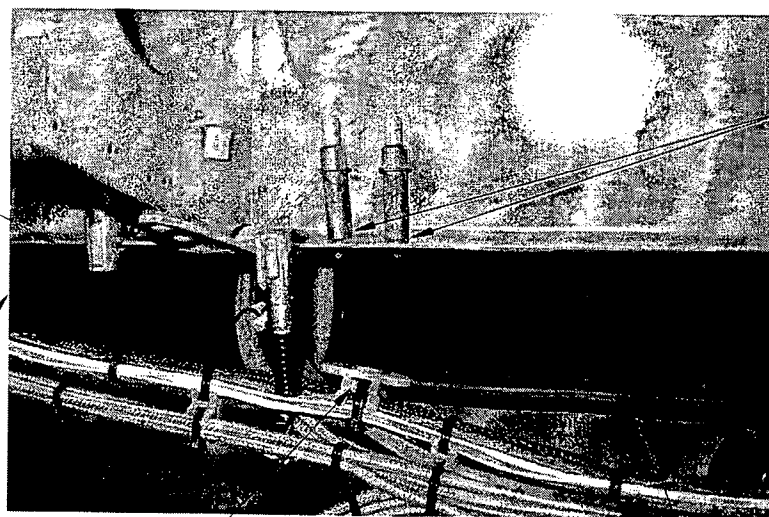

RIVET HOLES  
FOR PLASTIC  
STAND OFF


--- RBL 15.8

PLASTIC STAND OFF  
REF

D4434-043 FWD INBOARD  
BRACKET

**Figure 7. D4434-043 & D4436-045 Brackets Installation**

CONFIRM  
FLUSH WITH  
OUTBOARD  
EDGE OF MAIN  
BEAM FLANGE

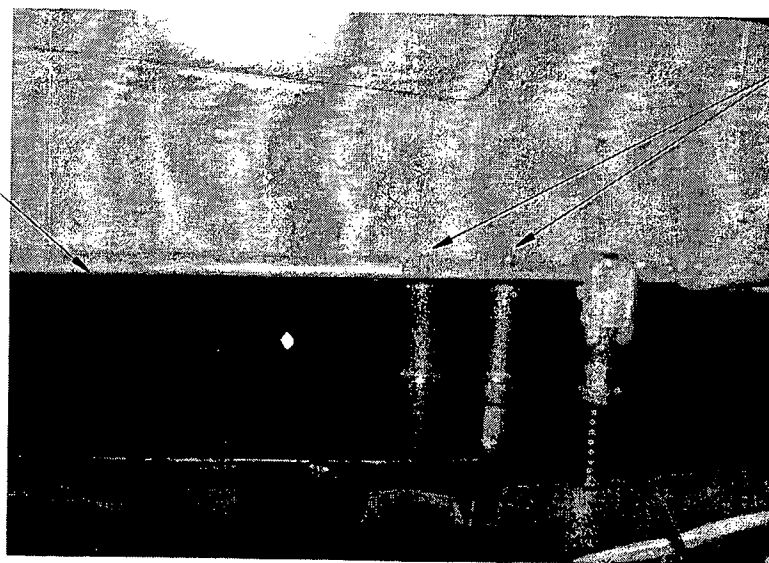

RIVET HOLES  
FOR PLASTIC  
STAND OFF

--- RBL 15.8

D4434-043 FWD INBOARD  
BRACKET

**Figure 8. D4434-043 Fwd Inboard Bracket Installation**

CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01

APPROVED


BY: *[Signature]*  
D. SHEPHERD (DE # 02)

DATE: 12.03.13  
CERT. NO.: SH92-18  
ISSUE NO.: 6

DESIGN	RF	<b>DART AEROSPACE LTD</b> HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO. <b>DSI 9590</b>	REV. C
MFG. APPR.	N/A	SHEET 7 OF 12	
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	<b>FLOOR WINDOW CLOSE-OUT KIT</b>	NTS
DATE	<b>12.03.13</b>	COPYRIGHT © 2012 BY DART AEROSPACE LTD <small>THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

90562

INSTALL  
D4436-043  
AFT OUTBOARD BRACKET  
USING  
AN3-3A BOLT (1)  
NAS1149F0332P WASHER (2)  
MS21042L3 NUT (1)  
3 PL

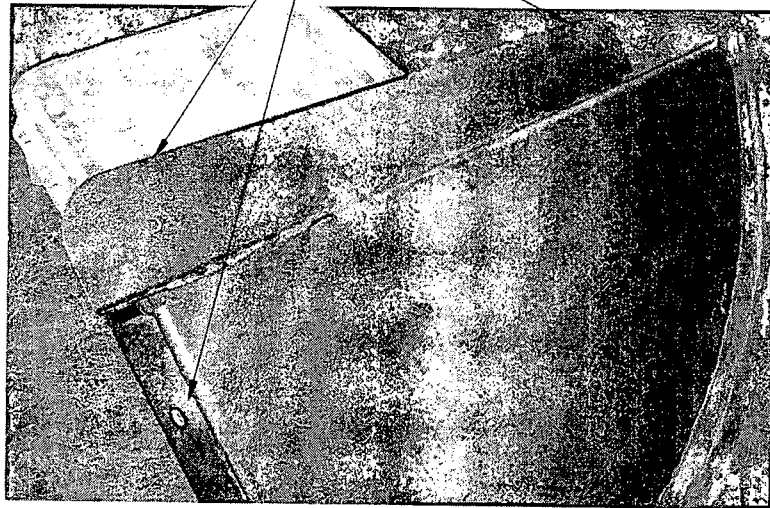

**Figure 9. D4436-043 Aft Outboard Bracket Installation**

CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01

APPROVED


BY:

D. SHEPHERD (DE # 02)


DATE: 12.03.13  
CERT. NO.: SH92-18  
ISSUE NO.: 6

DESIGN	RF	<b>DART AEROSPACE LTD</b> HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 8 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

965762

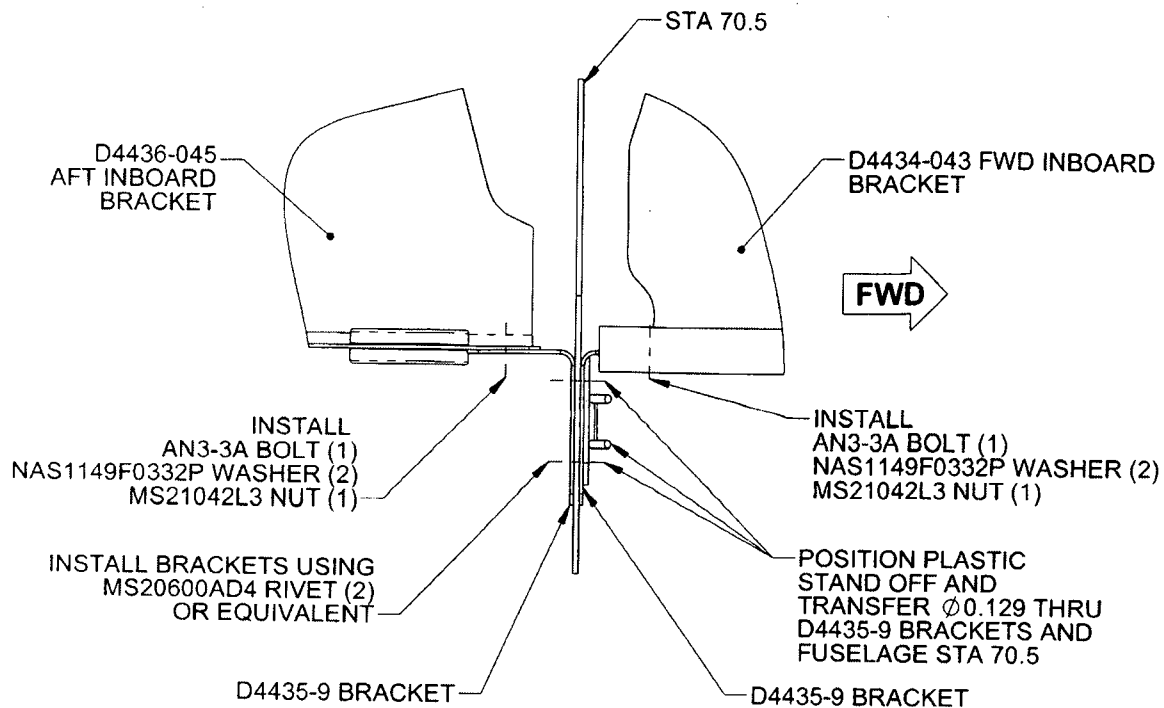

**LOOKING UP AT STA 70.5**

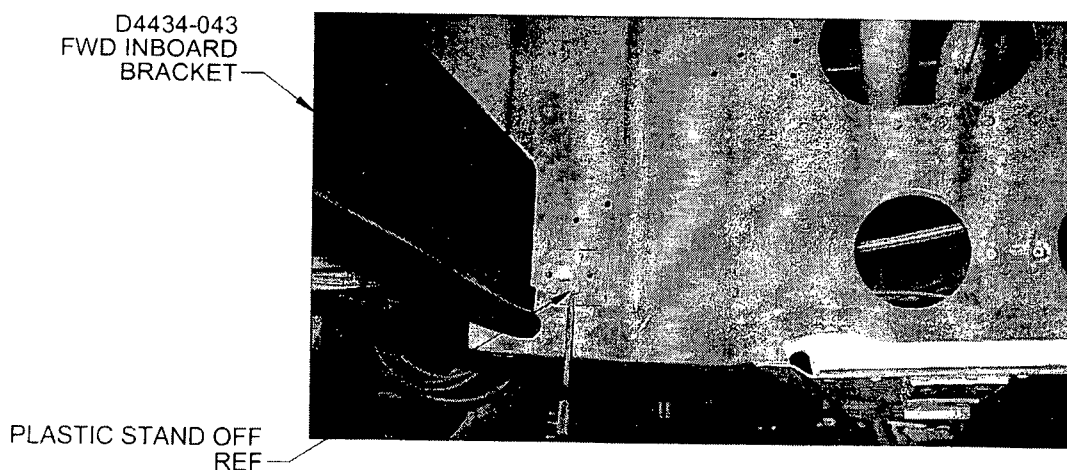

**Figure 10. D4434-043 and D4435-9 Brackets Installation**

CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01


APPROVED

BY: *[Signature]*  
D. SHEPHERD (DE # 02)


DATE: 12.03.13  
CERT. NO.: SH92-18  
ISSUE NO.: 6

DESIGN	RF	<b>DART AEROSPACE LTD</b>	
DRAWN	RF	HAWKESBURY, ONTARIO, CANADA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 9 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

96562

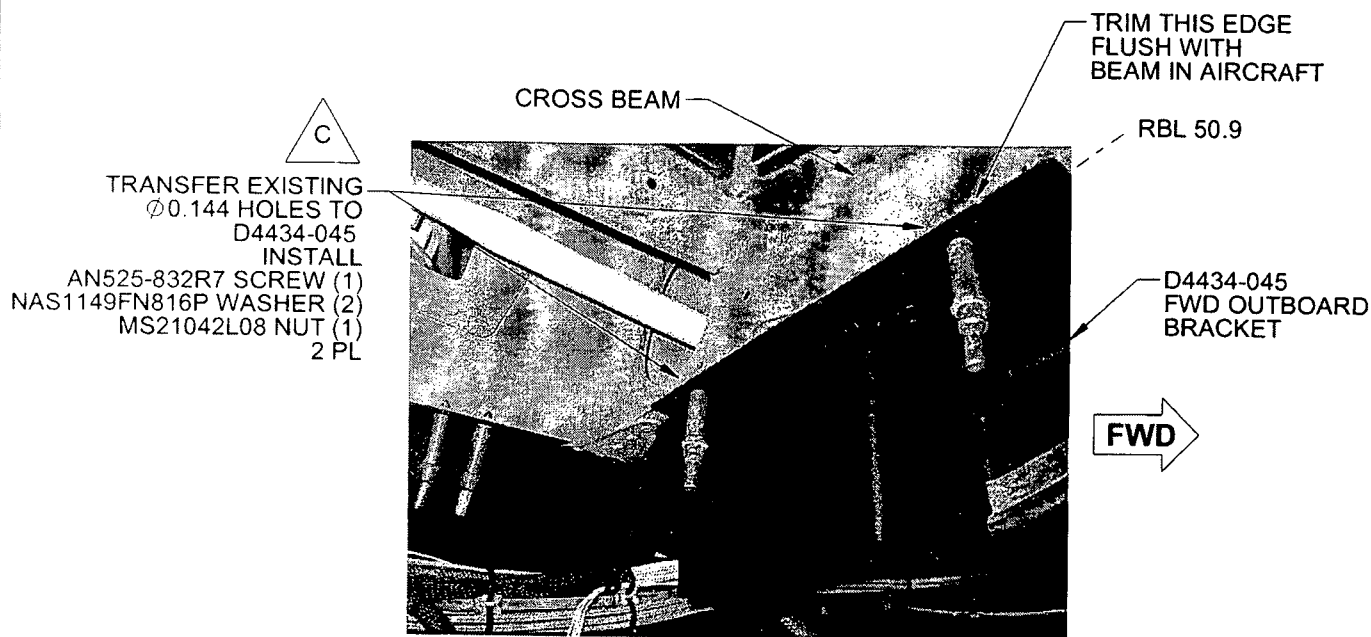

**Figure 11. D4434-045 Bracket Installation**

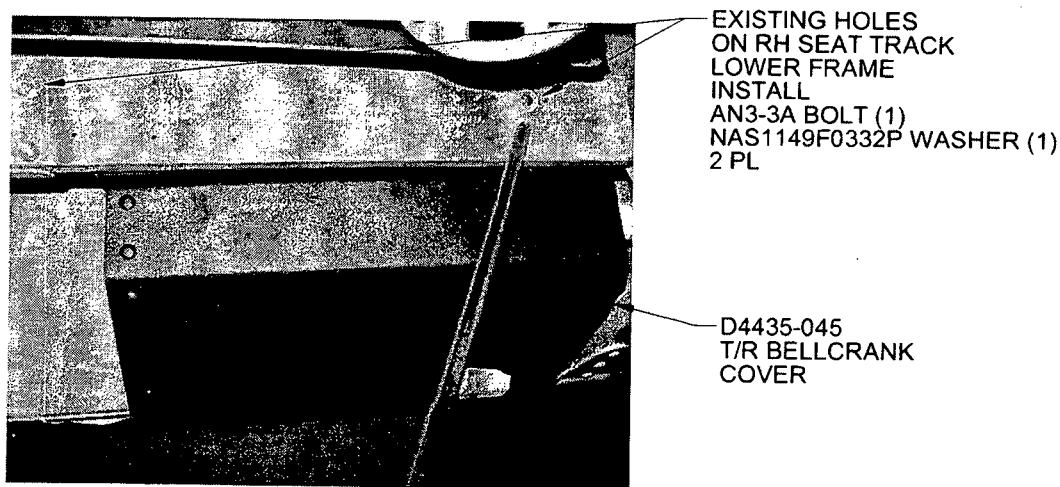

**Figure 12. D4435-045 T/R Bellcrank Cover Installation**


CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01

APPROVED  
BY: *[Signature]*  
D. SHEPHERD (DE # 02)

DATE: 12.03.13  
CERT. NO.: SH92-18  
ISSUE NO.: 6

DESIGN	RF	<b>DART AEROSPACE LTD</b> HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 10 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.	

965702

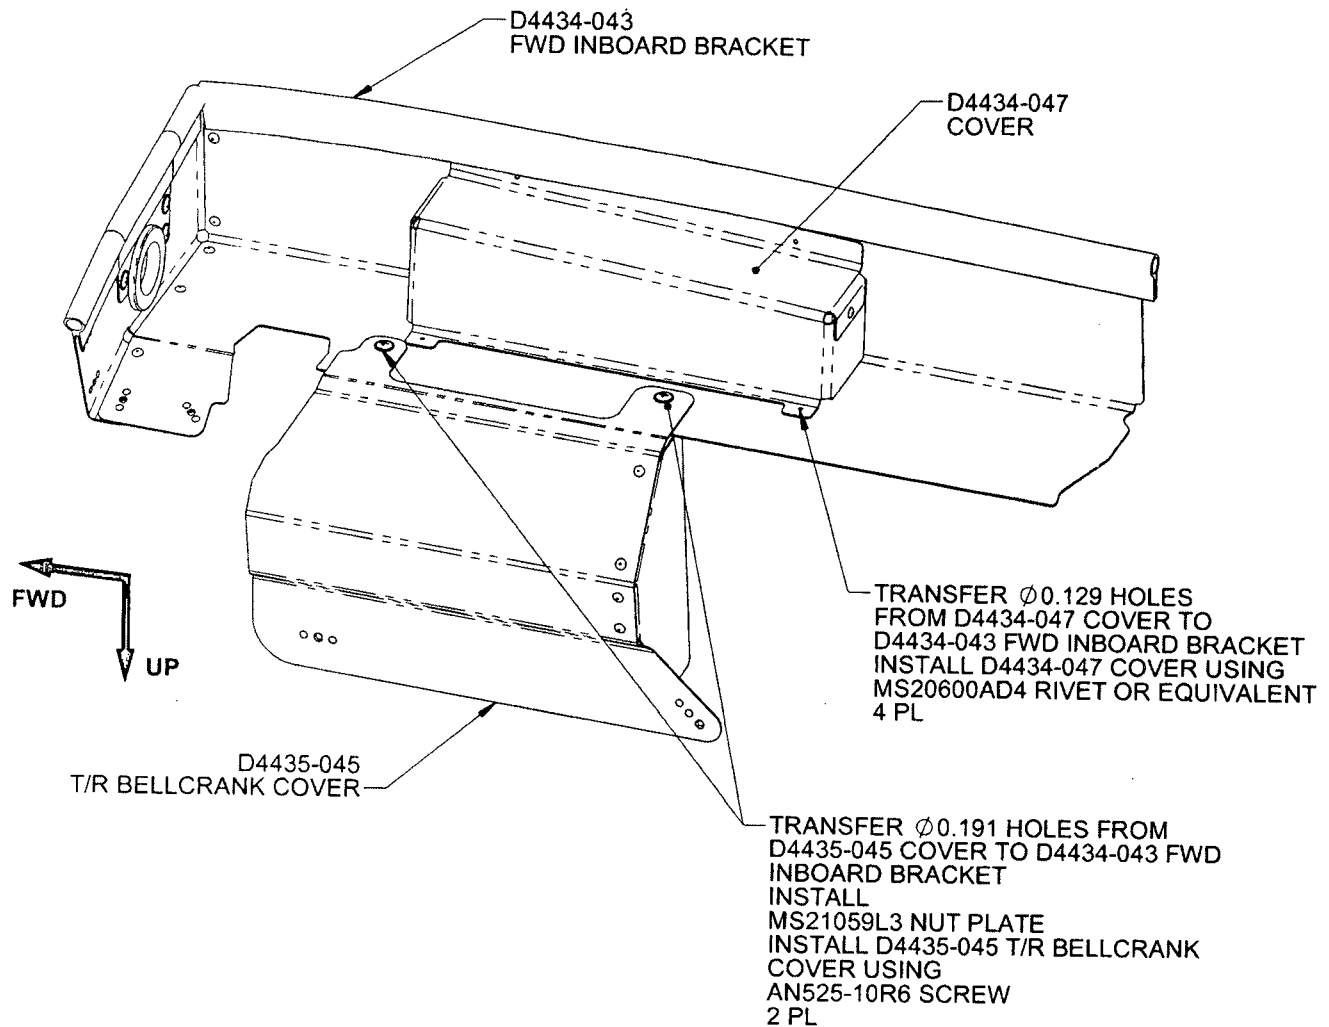

**Figure 13. D4435-045 & D4434-047 Cover Installation**

CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-Q-01



APPROVED

BY: *[Signature]*  
D. SHEPHERD (DE # 02)

DATE: 12.03.13  
CERT. NO.: SH92-18  
ISSUE NO.: 6

DESIGN	RF	<b>DART AEROSPACE LTD</b> HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO. <b>DSI 9590</b>	REV. C
MFG. APPR.	N/A		SHEET 11 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	<b>FLOOR WINDOW CLOSE-OUT KIT</b>	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD <small>THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL, AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

96562

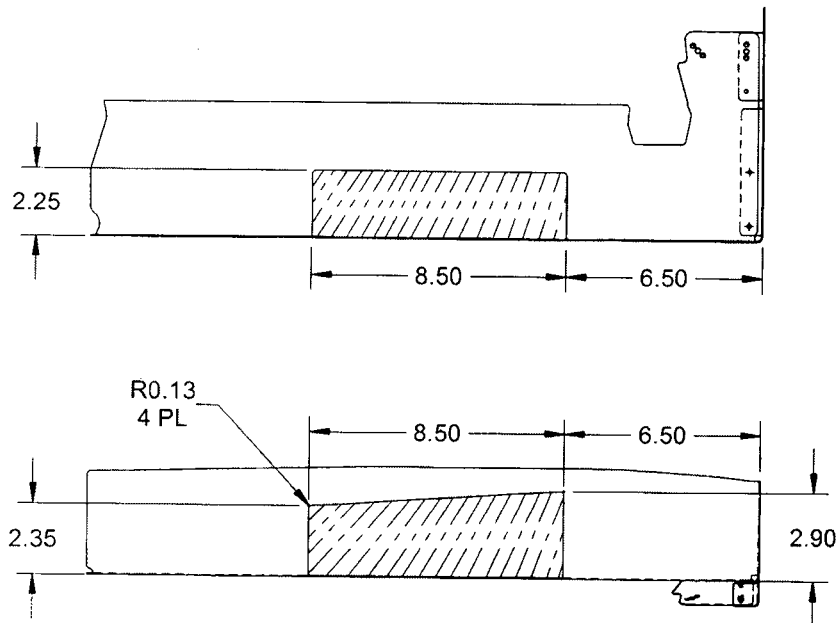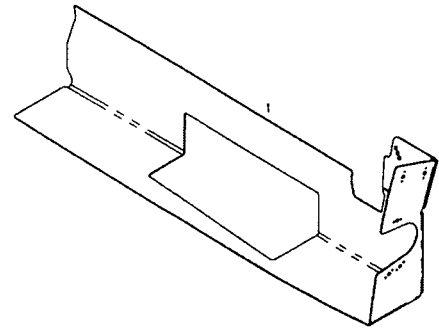

**Figure 14. D4434-043 Fwd Inboard Bracket Cutout**

CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01

**APPROVED**

BY: *[Signature]*  
D. SHEPHERD (DE # 02)

DATE: 12.03.13  
CERT. NO.: SH92-18  
ISSUE NO.: 6

DESIGN	RF	<b>DART AEROSPACE LTD</b> HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 12 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE	12.03.13	COPYRIGHT © 2012 BY DART AEROSPACE LTD <small>THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	

96562



# REFERENCE ONLY *SMF*

## 2.0 Part List

Qty <del>-141</del>	Part Number	Description
X	D350-567-141	FLOOR WINDOW CLOSE-OUT KIT
1	D3802-1-024	SEAL (24")
1	D4434-041	FWD BRACKET ASSEMBLY
1	D4434-047	COVER ASSEMBLY
1	D4435-045	T/R BELL CRANK COVER ASSEMBLY
2	D4435-9	BRACKET
1	D4436-041	AFT BRACKET ASSEMBLY
1	D4441-1-240	RUBBER SEAL (24")
2	AN3-3A	BOLT
2	AN525-832R7	SCREW
7	MS21042L06	NUT (OR MS21042-06)
2	MS21042L08	NUT (OR MS21042-08)
5	MS21042L3	NUT (OR MS21042-3)
2	MS21059L3	NUTPLATE
7	MS35206-229	SCREW
12	NAS1149F0332P	WASHER (AN960-10L)
14	NAS1149FN616P	WASHER (OR AN960-6L)
2	NAS1149FN816P	WASHER (OR AN960-8L)

## 3.0 Weight and Balance

The following is the net weight increase associated with the D350-567-141 Kit.

Installation	Weight	LATERAL		LONGITUDINAL	
		Arm	Moment	Arm	Moment
<b>D350-567-141</b>	3.9 lb	17.9 in	69.8 in-lb	65.5 in	255.5 in-lb
Floor Window Close-out Kit	1.77 kg	0.45 m	0.80 m-kg	1.66 m	2.94 m-kg

## 4.0 Installation Procedure

Notes:

- Figure 2 shows the general arrangement and installation of the D350-567-141 Close-out Kit. The procedure that follows outlines the step-by-step procedures for installing the kit with reference photos from the initial installation.
- In conjunction with this modification, it is acceptable to remove the interior floor windows as applicable. Note that the structural reinforcement around the window opening is still required.
  - D350-567-115 — OK to remove D3295-041
  - D350-567-031 — OK to remove D3212-1
  - D350-567-011 — OK to remove D2214
  - D350-567-021 — OK to remove D2951
- It is acceptable to drill/trim the D350-567-141 Close-out Kit as required to improve fit.

CANADA  
DEPARTMENT OF TRANSPORT  
AIRCRAFT CERTIFICATION  
BRANCH  
DAO # 01-O-01

APPROVED

BY: *[Signature]*  
D. SHEPHERD (DE # 02)

DATE: 12.03.13  
CERT. NO.: SH92-18  
ISSUE NO.: 6

DESIGN	RF	<b>DART AEROSPACE LTD</b> HAWKESBURY, ONTARIO, CANADA	
DRAWN	RF		
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. C
MFG. APPR.	N/A	DSI 9590	SHEET 2 OF 12
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	FLOOR WINDOW CLOSE-OUT KIT	NTS
DATE 12.03.13		COPYRIGHT © 2012 BY DART AEROSPACE LTD <small>THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.</small>	